


## CHOOSING THE CORRECT AIR AWNING MODEL - CARAVAN

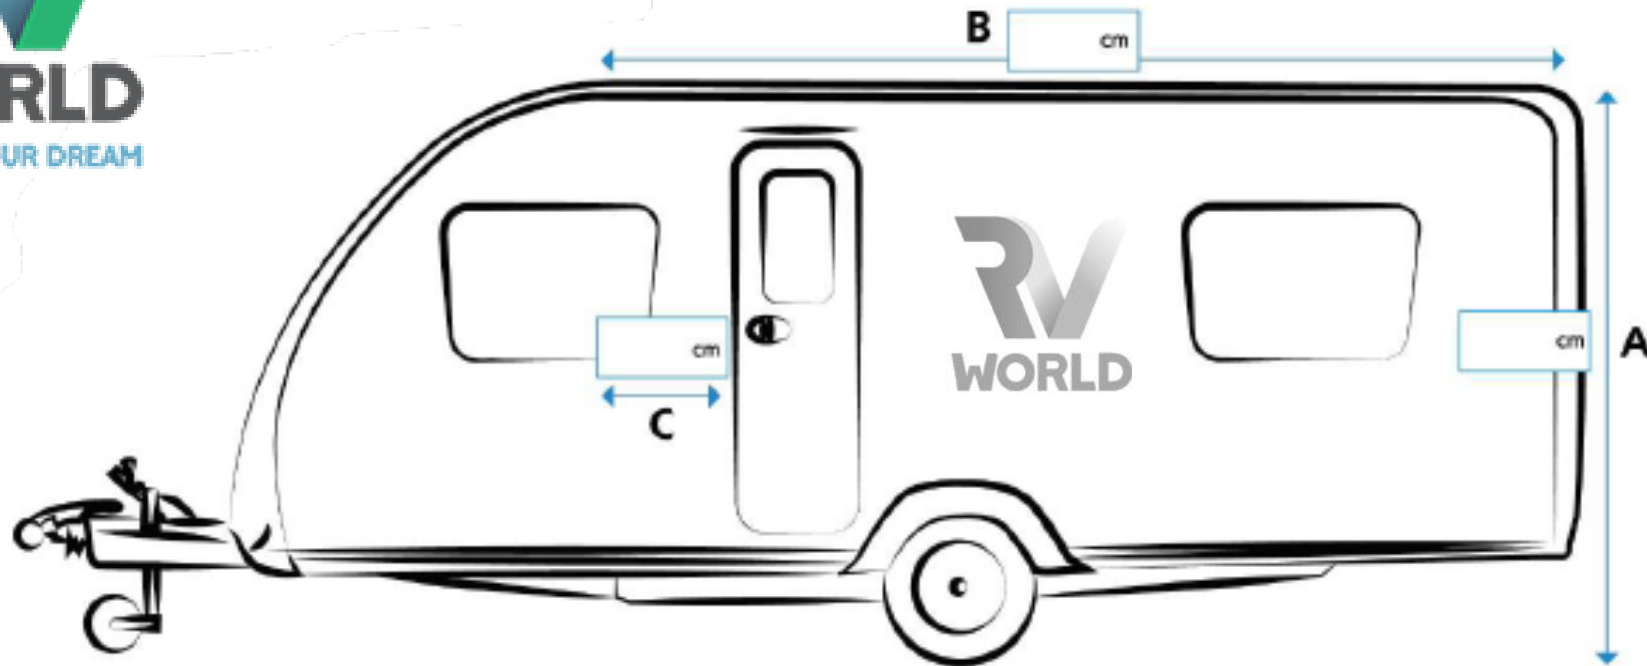

### A- AWNINGS FIT:

RAIL HEIGHTS 235CM-295CM

S 235-265CM M 265-295CM

### B- HORIZONTAL RAIL:

AWNINGS FIT TO THE STRAIGHT RAIL LENGTH ONLY

### C- DOOR CLEARANCE:

ALLOW FOR 15-20CM ABOVE DOOR FOR CLEARANCE

### D- WINDOW CLEARANCE:

AWNING CAN COVER WINDOW PANELS



ALWAYS INCLUDE HEIGHT OF LEVELING RAMPS  
- ALWAYS UP SIZE IF SIZING IS BORDERLINE



AIR AWNINGS FIT INTO CHANNEL ON  
BOX AWNINGS.  
AIR AWNINGS ARE NOT COMPATIBLE  
WITH ROLL OUT AWNINGS



GAS FLUE:  
THE AWNING SHOULD NOT BE INSTALLED ON  
THE GAS FLUE SIDE OF THE VEHICLE